



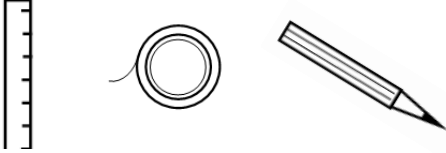
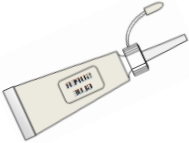



You will need these tools.

- 1**  A mechanical hand drill or electric/battery powered drill.
- 2**  Ideally use a WOOD drill bit.  
A 4mm (for BILLY) or  
A 2mm (for LACK) drill piece.
- 3**  A Phillips No 2 screwdriver.
- 4**  A bradawl – This is used to pilot before drilling.
- 5**  A ruler, some tape and a pencil (or felt tip).
- 6**  A cheaper type of super-glue.  
This fitting stage is not essential but recommended (for LACK only).
- 7**  A rasp type file for leveling drilled holes after placing super-glue and trying screws (LACK fitting only).  
Pliers to unscrew LACK leg screws if they become left behind in the table.